



# BRUNO

## 取扱説明書

# PORTABLE CLIP LIGHT FAN


## ポータブルクリップライトファン

BDE035

Thank you for purchasing our product. To use this product safely and correctly, please read and fully understand this manual before use. This manual also comes with a warranty, so please keep it in a safe place.

This product is only suitable for household use and is not suitable for commercial purposes.

 このたびは弊社製品をお買い上げいただき、まことにありがとうございます。本製品を安全に正しくお使いいただくために、お使いになる前に必ず本書をお読みになり十分ご理解ください。本書には保証書が付いていますので大切に保管してください。

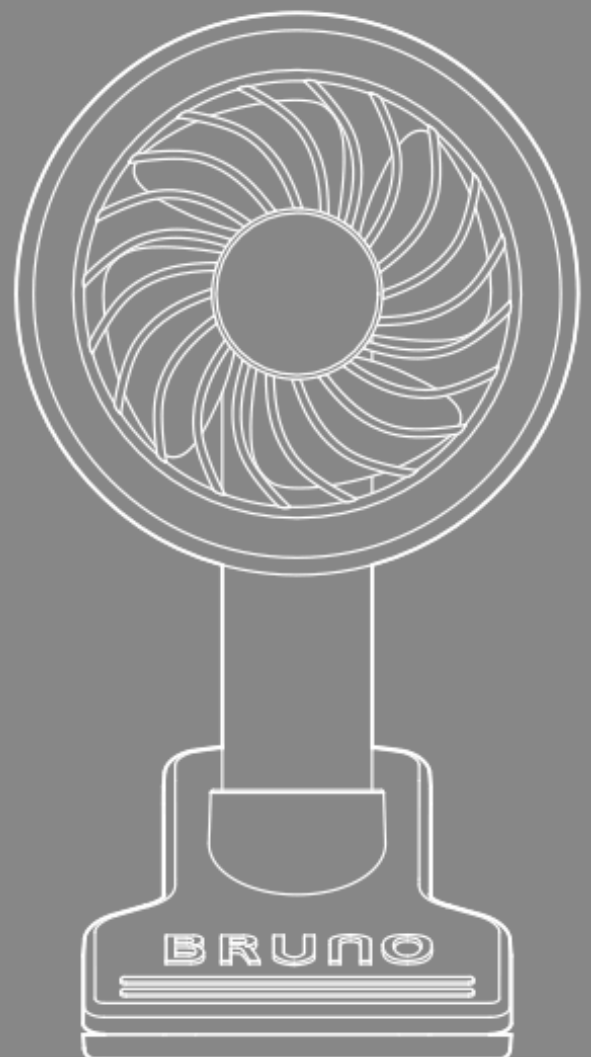

## Please read before use

### Important Safeguards

The precautions shown here are intended to ensure that the product is used safely and correctly, and to prevent injury or damage. Please be sure to follow these important safety precautions.

#### Differences between warnings and cautions



**WARNING:** If the instructions below are not followed, you may be at risk of death or series injury.



**CAUTION:** Please follow the following contents to reduce the risk of fire, electric shock and personal injury when using this product.

The contents expressed by the symbols are shown below.



Must Comply



Absolutely prohibited

#### Operating environment



Do not install in unstable locations, locations subject to vibration, or in high locations such as on a shelf.

If it tips over, it may cause injury, burns, electric shock, or a fire due to electrical leakage.



Do not use in places where water may splash or on a wet surface.

If water gets inside the device, it can cause electric shock or a fire due to electrical leakage.



Do not use in places with high temperatures, high humidity, or direct sunlight.

This may cause a malfunction.



Do not use this product alone or within reach of infants or small children.

There is a risk of injury or electric shock.



If you have pets indoors, such as dogs or cats, please be careful not to let them damage the device or USB cord.

This may cause a fire or malfunction.



Do not use near flammable materials or open flames.

Do not use this product near kerosene, gasoline, paint thinner, benzene, or unlit cigarettes. Also, do not allow this product to suck up such substances, as this may result in an explosion or fire.

#### Power supply



Do not use the USB cable if it is damaged.

There is a risk of disconnection or electric shock.



Do not touch the USB plug, micro USB plug, or AC-USB adapter with wet hands.

This may cause electric shock.



Do not lick the USB plug, microUSB plug, or AC-USB adapter plug.

It may cause burns or electric shock.



**WARNING**



Do not damage the USB cable, USB plug, microUSB plug, or AC-USB adapter.  
Do not damage, modify, place near heat sources, forcibly bend, twist, pull, place heavy objects on, etc.  
Using the product while damaged may result in electric shock, short circuit, or fire.



Do not allow dirt, dust, metal pieces, etc. to adhere to the USB plug, microUSB plug, or port.  
This may cause electric shock, ignition, or fire.



Do not use USB cables bundled together.  
Doing so may cause electric shock, ignition, or fire.



Do not modify, forcibly bend, twist, or pull the USB cable.  
This may cause a malfunction.



In the event of an abnormality or failure, immediately stop using the product and disconnect the USB cable.  
Doing so may cause electric shock or fire.



Do not charge using a car cigarette lighter etc.  
Doing so may cause heat generation, fire, or electric shock.



**CAUTION**



Do not charge using a car cigarette lighter etc.  
This may cause overheating, fire, or electric shock.



Do not place anything on the USB cable while charging  
Doing so may cause malfunction or fire.



Disconnect the USB cable when not in use.  
Doing so may cause electric shock due to insulation deterioration or fire due to current leakage.



When connecting or disconnecting the USB cable, be sure to hold the base.  
Doing so may damage the cable and cause electric shock or fire.

## About the battery (built-in)



**WARNING**



Do not remove the built-in rechargeable battery from the main unit.



Do not put batteries into fire.  
This may cause the battery to explode, overheat, or catch fire.



**CAUTION**



This product may become hot during charging, so be careful not to get burned.



Use and charge when the ambient temperature is within the range of 0°C to 40°C.  
Doing so may cause the built-in rechargeable battery to leak, overheat, explode, or deteriorate in



If it does not work even after charging for enough time, do not use it.



If liquid leaked from the built-in rechargeable battery gets on your skin or clothes, wash it off with clean water without rubbing.  
Doing so may cause injury.

## About handling



WARNING



Do not disassemble, repair, or modify the product.  
Doing so may cause injury, electric shock, or fire.  
For repairs, please contact the store where you purchased the product or our customer service center.



Do not subject the unit to shock.  
Dropping it or hitting it with something may cause it to malfunction.



Do not insert foreign objects into holes or gaps in the main unit.  
Doing so may cause injury or malfunction.



Do not use within reach of infants.  
Doing so may cause injury.



Do not use thinner or alcohol when cleaning.  
This may cause a malfunction.



Do not get your hands or fingers caught in the clip.  
Doing so may cause injury.



Insert the clip all the way to a location that is strong enough to secure it.  
If the product is not secured properly, there is a risk of injury or malfunction due to the product falling.



Attach/remove the clip after turning off the power button.  
This may cause injury or malfunction.

## Before using the electric fan



WARNING



Do not expose your body to wind for a long time.  
It may be harmful to your health. Especially when used by infants, the elderly, or sick people who are on vacation, Please be careful of those around you.



Do not use the main unit to dry by covering it with cloth-like objects or clothing.  
It may overheat and cause a fire.



Do not insert fingers or foreign objects into the guard or moving parts.  
Doing so may cause injury or malfunction.



Keep hair and clothing away from the guard.  
Hair and clothing may become entangled and cause injury.



Do not use the device to direct the wind toward combustion appliances.  
If wind hits the combustion parts of fireplaces, stoves, etc., flames may scatter and incomplete combustion

 
## Avoid using or storing the product in the following locations.

- Places exposed to direct sunlight.
- Places that are hot and humid. (Inside the car, bathroom, etc.)
- Near fire or heat sources. (Stove, gas stove, etc.)
- Near clothing, curtains, futons, walls, paper, and heat-sensitive items.
- Places with vibrations, unstable places, high places such as on shelves.
- Places exposed to water.

## Name of each part


本体

Main Body

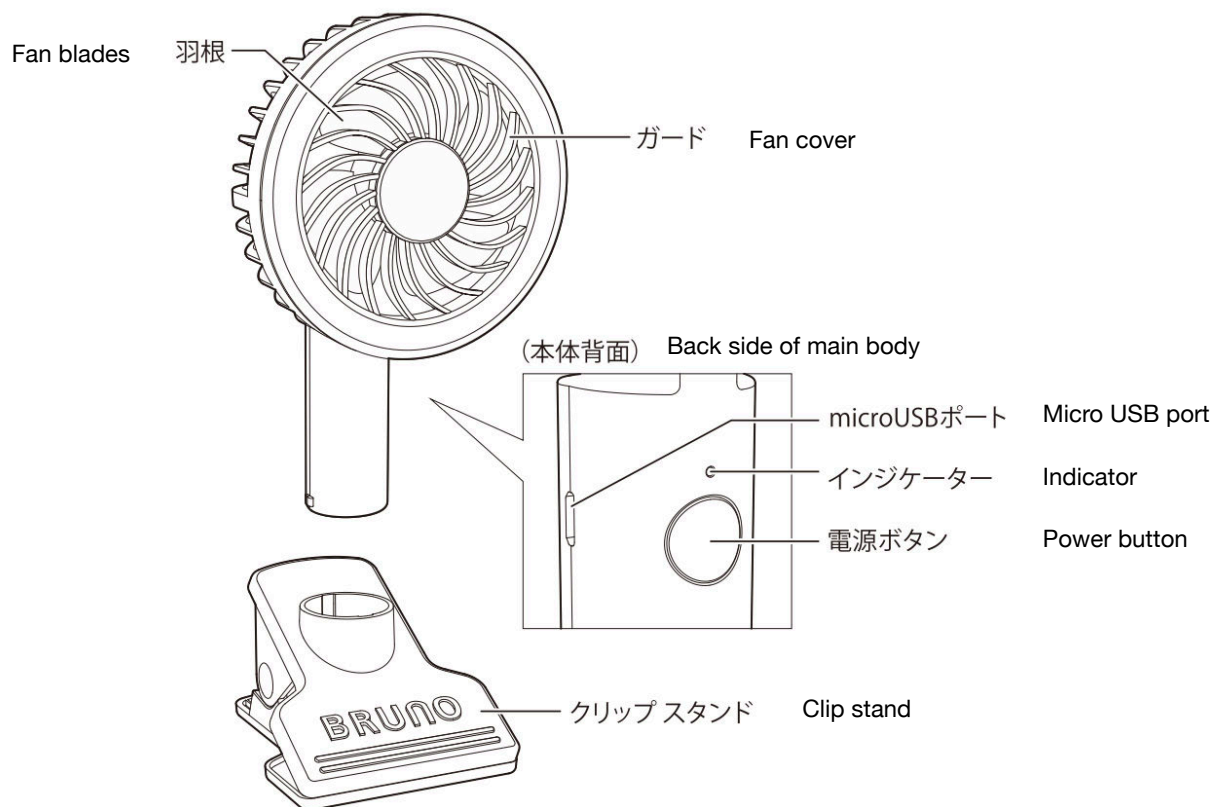

付属品

 Accessory

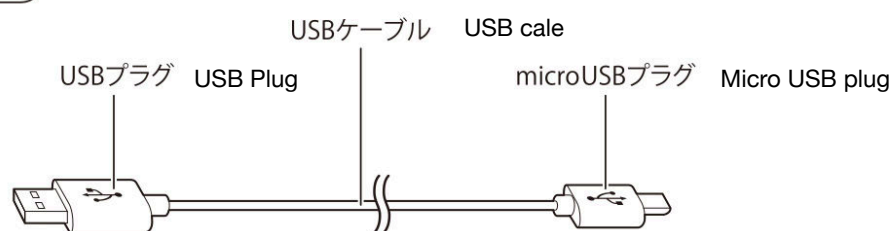


## How to use

### Power connection and charging method

★ If you are using it for the first time after purchasing, please be sure to fully charge it before you start using it.

- (1) Firmly insert the microUSB plug of the included USB cable into the microUSB port on the side of the main unit.
- (2) Securely connect the USB plug to the USB Type-A connector on your computer, etc. When using with AC240V power supply, connect the USB plug to the AC-USB adapter (commercially available), and plug the AC-USB adapter into an AC240V outlet. The indicator lights red to start charging, and lights blue to indicate full charge.

 - \* Never use any USB cable other than the included one.
- \* AC-USB adapter not included.

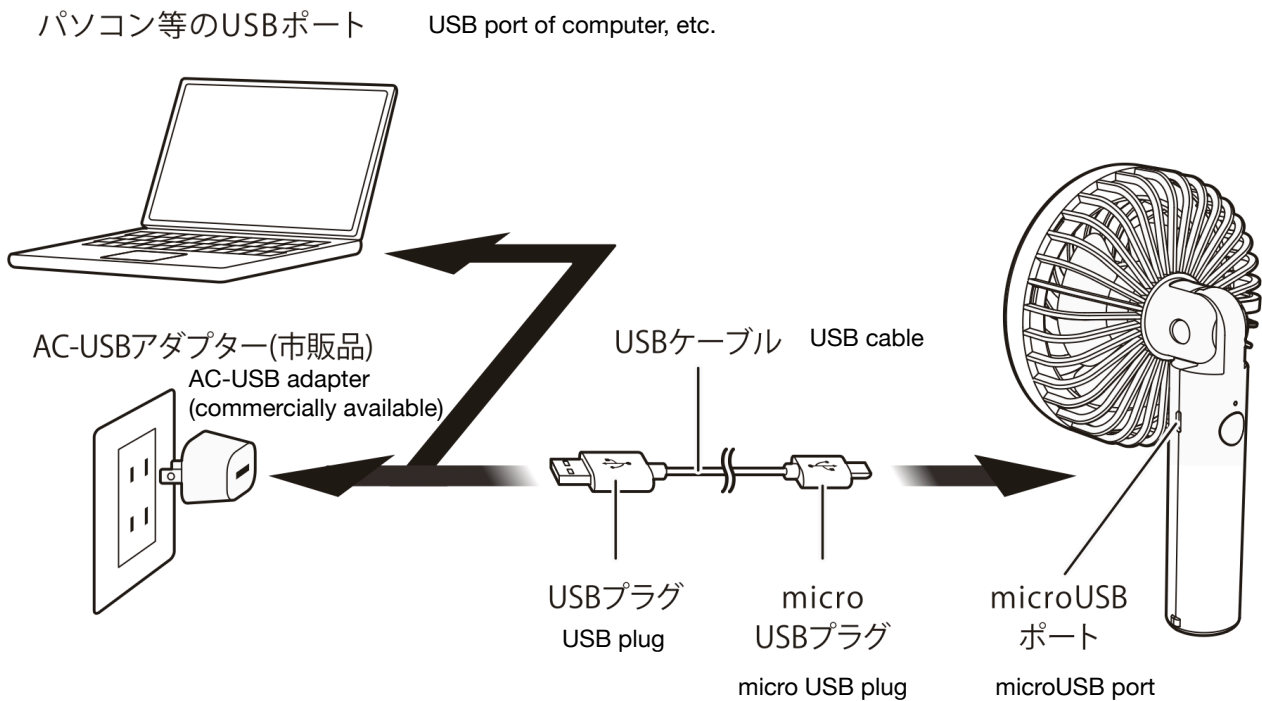

#### About lithium ion batteries

- The battery can be charged and discharged approximately 1000 times. After repeated charging, the rechargeable capacity will slowly decrease.
- Please charge the built-in rechargeable battery only after consuming a certain amount of capacity. Repeated charging a battery that is almost fully charged will shorten battery life.
- Leaving the built-in rechargeable battery empty for a long time will shorten the lifespan of the battery. It is recommended to recharge the battery to 50% at least once a month.
- The built-in rechargeable battery cannot be replaced. Never open the main case.

 
## How to operate

### ★ Fan

- Press the power button to start operation.
- The air volume changes each time you press the power button.
- Air flow switching: Power OFF → Low → Medium → High

### ★ Light

- Long press the power button to turn on the light.
- The light intensity changes each time you press and hold the power button.
- Light intensity switching: power OFF → weak → strong

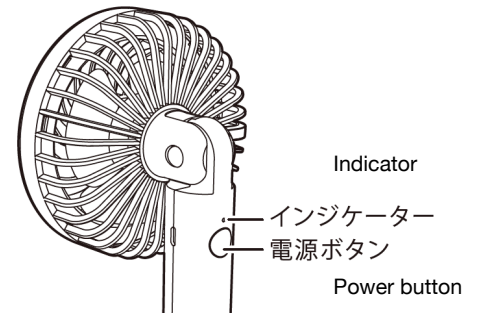


## Attaching/removing the clip stand

### ★ How to attach the clip stand

- Align the ▽ position on the main unit with the ▽ position on the clip stand and insert it.
- Turn the main unit in the →LOCK direction until it clicks.

### ★ How to remove the clip stand

 - Turn the main body in the →OPEN direction.
- Align the ▽ position on the main unit with the ▽ position on the clip stand and remove it.

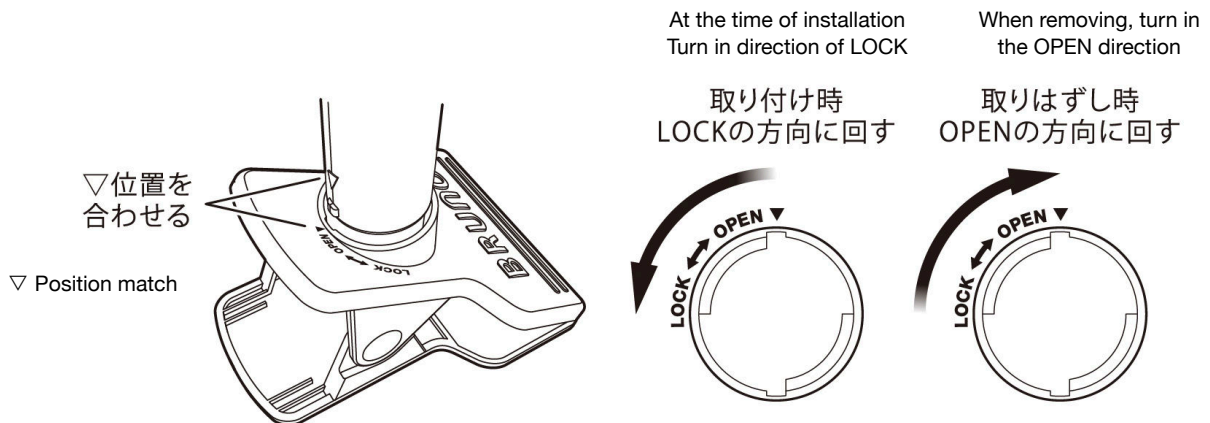


- When installing/removing the product, press the power button to stop operation, and be careful not to touch the power button.
- Secure the clip in a strong enough location by inserting it as far as it will go. If you use the product without securing it sufficiently, there is a risk of injury or malfunction due to the product falling.
- Please be careful not to get your hands or fingers caught in the clip.
- Appropriate board thickness 15mm to 20mm/Maximum installable board thickness 40mm

## How to Care
 
### How to adjust the angle


The angle can be adjusted 180 degrees forward and backward.

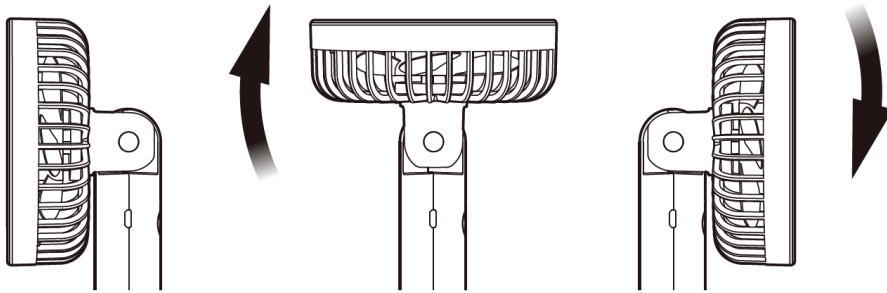

- When adjusting the angle, press the power button to stop operation and be careful not to touch the power button.
- To adjust the angle, hold the main body and clip stand and hold the guard to adjust the angle.

### How to care for it

 - Ensure the product is off before cleaning.
- Wipe the main unit with a well-wrung soft cloth.
- If the stain is severe, soak a soft cloth in a small amount of diluted neutral detergent with water, and wipe. Then wipe it with a dry cloth.

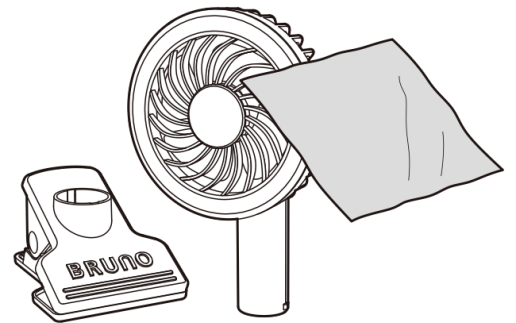

- When cleaning, press the power button to stop operation.
- To prevent deterioration and discoloration, do not use benzene, thinner, alcohol, alkaline detergents, etc.
- Do not apply strong force to the blades, guards, etc.

### Storage method

If you are not going to use it for a long time, please dry it thoroughly after cleaning and store it in a plastic bag etc.

## If you think there is a problem ...

Issue	What to check?	How to resolve
The fan does not move after you have pressed the power button	<ul style="list-style-type: none"> <li>➔ Is the USB cord properly connected to the USB port and the AC-USB adapter?</li> <li>➔ Is the microUSB plug properly connected to the microUSB port on the device?</li> <li>➔ Is it sufficiently charged?</li> </ul>	<ul style="list-style-type: none"> <li>➔ Make sure you insert the USB cord securely into the USB port and AC-USB adapter.</li> <li>➔ Make sure you insert the microUSB plug securely into the microUSB port on the device.</li> <li>➔ Please connect the USB cable to charge.</li> </ul>
The indicator does not light up even when the USB cable is connected.	<ul style="list-style-type: none"> <li>➔ Is the USB cord properly connected to the USB port and AC-USB adapter?</li> <li>➔ Is the microUSB plug properly connected to the microUSB port on the main unit?</li> <li>➔ The built-in rechargeable battery may have reached the end of its life. Contact customer service.</li> </ul>	<ul style="list-style-type: none"> <li>➔ Make sure the USB cord is properly inserted into the USB port or AC-USB adapter.</li> <li>➔ Make sure that the microUSB plug is securely inserted into the microUSB port on the main unit.</li> </ul>

If the problem persists even after following the steps above, please contact our customer service center.

## Product Specification

<b>Input</b>	DC 5V 1A Max. (USB charging)
<b>Built-in rechargeable battery</b>	Lithium ion storage battery 3.7V 2200mAh After use, please do not throw it away as household garbage. After using the battery, please bring it to a store that recycles rechargeable batteries.
<b>Charging time</b>	Approximately 4.5 hours (input: 5V 1A)
<b>Continuous use time</b>	Strong: Approximately 3 hours Medium: Approximately 4.5 hours Weak: Approximately 10 hours (when using only fan)
<b>Size</b>	W105×H193×D100mm (when using clip stand)
<b>Weight</b>	Approx. 235g (when using clip stand)
<b>Material</b>	Body: ABS resin, Guard: ABS resin, Wing: Polypropylene
<b>Cord length</b>	Approximately 100cm
<b>Country of origin</b>	China

Please note that product specifications and designs are subject to change without notice.

## WARRANTY

1. Care With You Pty Ltd (“CWY” or “We”) warrants this product is free from faults in manufacture and materials for twelve (12) months (“Warranty Period”) from the date the Product is purchased by the original owner in Australia.
2. If the Products prove defective within the Warranty Period by reason of improper workmanship or material, we may, at our own discretion, repair or replace the Product without charge.
3. Our Products come with guarantees that cannot be excluded under the relevant Australian Consumer Law. You are entitled to a replacement or refund for a major failure and for compensation for any other reasonably foreseeable loss or damage. You are also entitled to have the product repaired or replaced if the product fails to be of an acceptable quality and the failure does not amount to a major failure. The benefits given to you by this warranty are in addition to your other rights and remedies under any laws which relate to the appliance.
4. This warranty does not cover:
  - (I) Failure due to incorrect usage, abuse, improper repair, modification, disassembly and cleaning,
  - (II) Failure due to natural disaster, fire, or improper storage. A fee will be charged for repair and repair of damage even within the warranty period.
  - (III) If there is no purchase date or receipt/invoice, or if more than one year has passed since the date of purchase
  - (IV) Breakdowns and damage caused by use for purposes other than general household use (for example, commercial use) are not covered by the warranty.
5. This Warranty does not cover the cost of claiming under the warranty or transport of the Products to and from You or the Supplier to us.
6. To the extent permitted by law and subject to your statutory rights and guarantees, this warranty excludes liability for consequential loss or any other loss or damage caused to property or persons arising from your purchase, use or non-use of the product.

---

Care With You Pty Ltd  
1800 837 266  
[info@livingmode.com.au](mailto:info@livingmode.com.au)  
[livingmode.com.au](http://livingmode.com.au)

---